



TriCaster®

Quick Start Guide

- 1 Connect power cables to the rear panel and plug into an external power source
- 2 Switch power supplies to the ON position
- 3 Connect cable for User Interface monitor to the INTERFACE DVI port
- 4 Connect cable for Multiview monitor to the MULTIVIEW DVI port
- 5 Connect keyboard and mouse to USB ports
- 6 Plug in cameras using the appropriate VIDEO IN connectors
- 7 Plug in audio sources using the appropriate AUDIO IN connectors
- 8 Connect cables for video output to the appropriate VIDEO OUT connectors
- 9 Connect cables for audio output to the appropriate AUDIO OUT connectors
- 10 Connect power cable to control surface and plug into an external power source
- 11 Connect control surface to TriCaster USB port using the included USB cable
- 12 Optional: Connect Ethernet cable to TriCaster ETHERN ET port and plug in to an active network connection
- 13 Open front panel and install removable hard drive(s) into drive bays
- 14 Power on TriCaster and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys if, desired)
- 15 Locate the sticker with the Serial Number for your TriCaster
- 16 Complete the required steps in the Register TriCaster dialog box to proceed to the NewTek Registration site
- 17 Create a new User Account if needed, select your product to register, and then enter all required fields (valid e-mail address required)
- 18 Retrieve the Registration Code from the e-mail address used to register and write on the Serial Number sticker for future reference
- 19 At the Startup Screen, choose a session name and resolution, then click Start Session
- 20 From the Session Screen, select the Live icon and click Start Live Production
- 21 Double-click a Camera input monitor to open the configuration panel
- 22 Select the appropriate camera connection type for the input and click close
- 23 Repeat steps 21-22 for each camera connected
- 24 Choose Program and Preview sources to begin your show

Update TriCaster (Optional)

- A. Connect Ethernet cable to the ETHERNET port and plug into an active network connection, as instructed in step 12
- B. Register TriCaster as instructed in steps 15-18, if needed
- C. At the Startup Screen, select the Shutdown icon and choose Administrator Mode from the menu
- D. In Administrator Mode, select Update TriCaster from the System Utilities menu to download and install software update, if available

1



Connect power cables to the rear panel and plug into an external power source

2



Switch power supplies to the ON position

3



Connect cable for User Interface monitor to the INTERFACE DVI port

4



Connect cable for Multiview monitor to the MULTIVIEW DVI port

5



Connect keyboard and mouse to USB ports

6



Plug in cameras using the appropriate VIDEO IN connectors

7



Plug in audio sources using the appropriate AUDIO IN connectors

8



Connect cables for video output to the appropriate VIDEO OUT connectors

This Quick Start Guide is designed so that you can set up your TriCaster quickly and start using it right away. For comprehensive installation and operation instructions, please review the User Guide, accessible from the HELP menu of your TriCaster system. Supplemental product training videos are also available online at www.newtek.com.

Rack rails are recommended for rack-mount installation of TriCaster 8000 and can be purchased from an authorized NewTek reseller. Hardware may vary slightly from the system shown.

9



Connect cables for audio output to the appropriate AUDIO OUT connectors

10



 
Connect power cable to control surface and plug into an external power source

11



Connect control surface to TriCaster USB port using the included USB cable

12

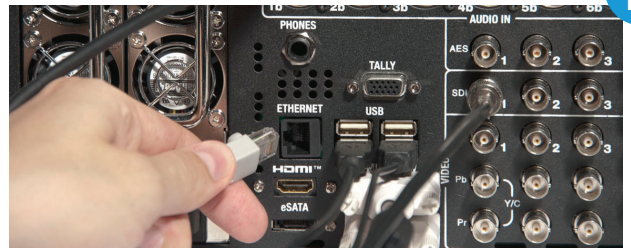

Optional: Connect Ethernet cable to TriCaster ETHERNET port and plug in to an active network connection

13



Open front panel and install removable hard drive(s) into drive bays

14



 
Power on TriCaster and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys, if desired)

15




Locate the sticker with the Serial Number for your TriCaster

16

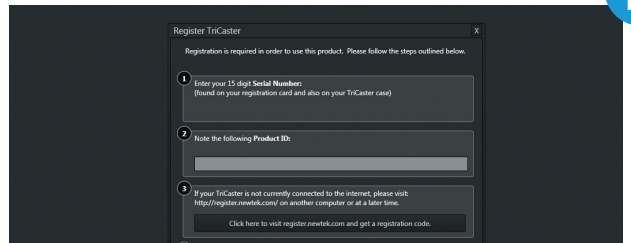

Complete the required steps in the Register TriCaster dialog box to proceed to the NewTek Registration site

 17

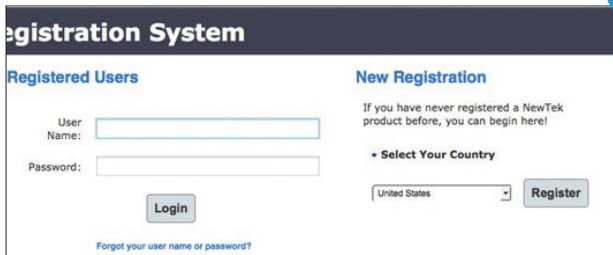


Create a new User Account if needed, select your product to register, and then enter all required fields (valid e-mail address required)

18




Retrieve the Registration Code from the e-mail address used to register and write on the Serial Number sticker for future reference

 19

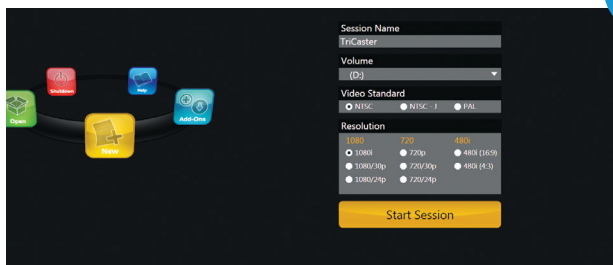


At the Startup Screen, choose a session name and resolution, then click Start Session

 20

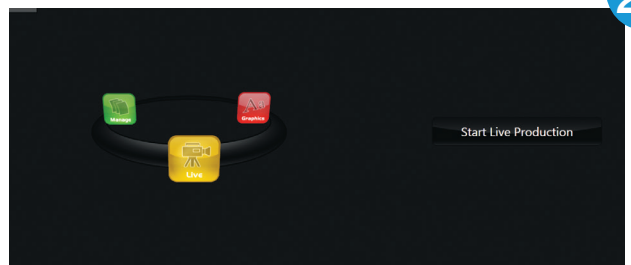


From the Session Screen, select the Live icon and click Start Live Production

 21

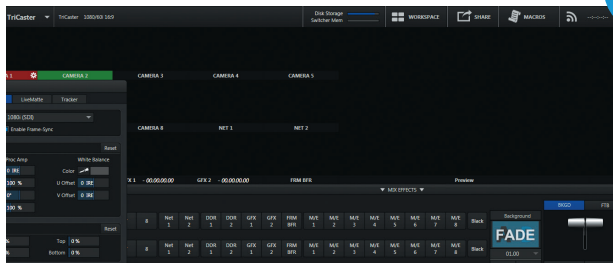


Double-click a Camera input monitor to open the configuration panel

 22

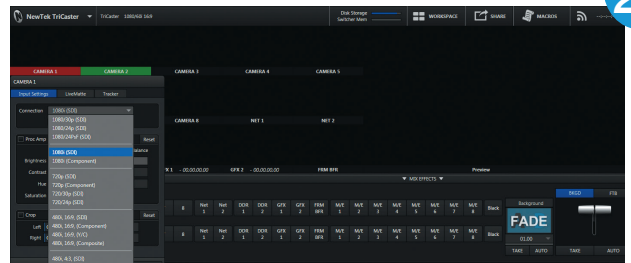


Select the appropriate camera connection type for the input and click close

 23

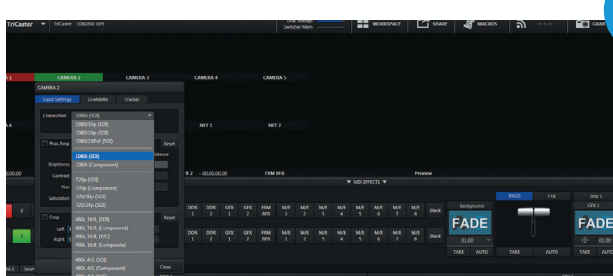

Repeat steps 21-22 for each camera connected

 24

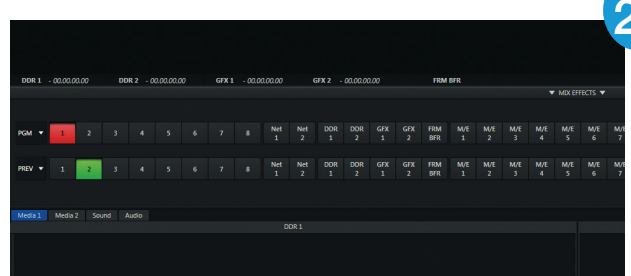

Choose Program and Preview sources to begin your show

NewTek periodically issues free software updates and downloads for TriCaster that provide enhanced performance and new features. Once your system is registered, you may immediately access these downloads by visiting your personal registration page at register.newtek.com.

Refer to the Update TriCaster instructions on the At a Glance page of your Quick Start Guide to optionally check for updates upon initial startup, if desired.

- 1 Connect power cable to the rear panel and plug into an external power source
- 2 Connect cable for User Interface monitor to the vertical DVI port
- 3 Connect cable for Multiview monitor to the vertical HDMI port
- 4 Connect keyboard, mouse, and control surface (optional) to USB ports
- 5 Plug in cameras using the appropriate VIDEO IN connectors
- 6 Plug in audio input and output devices using the appropriate AUDIO IN and AUDIO OUT connectors
- 7 Connect cable for video output to the appropriate VIDEO OUT connector
- 8 Optional: Connect Ethernet cable to the ETHERNET port and plug into an active network connection
- 9 Open the right door of the front panel
- 10 Power on TriCaster and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys, if desired)
- 11 Locate the sticker with the Serial Number for your TriCaster
- 12 Complete the required steps in the Register TriCaster dialog box to proceed to the NewTek Registration site
- 13 Create a new User Account if needed, select your product to register, and then enter all required fields (valid e-mail address required)
- 14 Retrieve the Registration Code from the e-mail address used to register and write on the Serial Number sticker for future reference
- 15 At the Startup Screen, choose a session name and resolution, then click Start Session
- 16 From the Session Screen, select the Live icon and click Start Live Production
- 17 Double-click a Camera input monitor to open the configuration panel
- 18 Select the appropriate camera connection type for the input and click close
- 19 Repeat steps 17-18 for each camera connected
- 20 Choose Program and Preview sources to begin your show

Update TriCaster (Optional)

- A. Connect Ethernet cable to the ETHERNET port and plug into an active network connection, as instructed in step 8
- B. Register TriCaster as instructed in steps 11-14, if needed
- C. At the Startup Screen, select the Shutdown icon and choose Administrator Mode from the menu
- D. In Administrator Mode, select Update TriCaster from the System Utilities menu to download and install software update, if available



Connect power cable to the rear panel and plug into an external power source



Connect cable for User Interface monitor to the vertical DVI port



Connect cable for Multiview monitor to the vertical HDMI port



Connect keyboard, mouse, and control surface (optional) to USB ports



Plug in cameras using the appropriate VIDEO IN connectors



Plug in audio input and output devices using the appropriate AUDIO IN and AUDIO OUT connectors



Connect cable for video output to the appropriate VIDEO OUT connector



Optional: Connect Ethernet cable to the ETHERNET port and plug into an active network connection

This Quick Start Guide is designed so that you can set up your TriCaster quickly and start using it right away. For comprehensive installation and operation instructions, please review the User Guide, accessible from the HELP menu of your TriCaster system. Supplemental product training videos are also available online at www.newtek.com.

Rack rails are recommended for rack-mount installation of TriCaster 460 and can be purchased from an authorized NewTek reseller.

Hardware and screen displays may vary slightly from system shown.

9



Open the right door of the front panel

10



 
Power on TriCaster and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys, if desired)

11




Locate the sticker with the Serial Number for your TriCaster

12

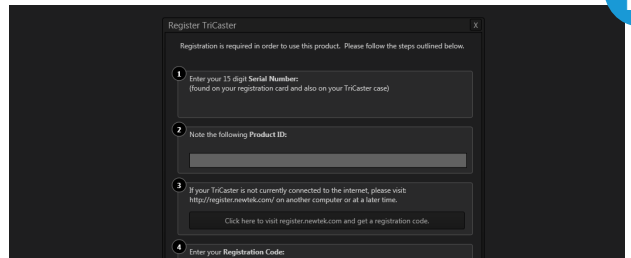

Complete the required steps in the Register TriCaster dialog box to proceed to the NewTek Registration site

 13

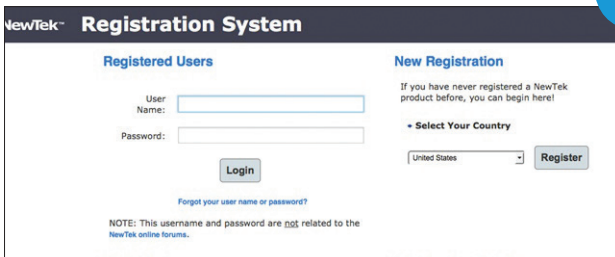

Create a new User Account if needed, select your product to register, and then enter all required fields (valid e-mail address required)

14



 
Retrieve the Registration Code from the e-mail address used to register and write on the Serial Number sticker for future reference

15




At the Startup Screen, choose a session name and resolution, then click Start Session

16

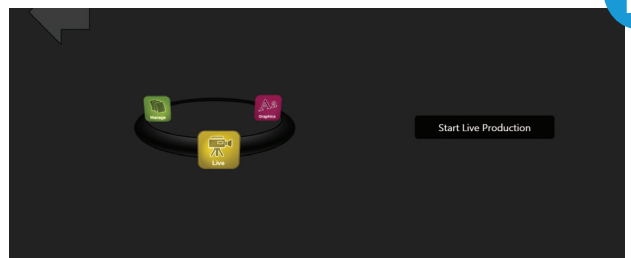


 From the Session Screen, select the Live icon and click Start Live Production

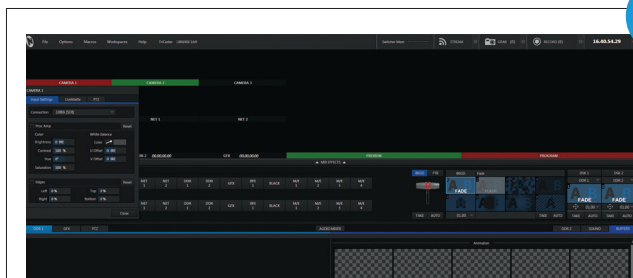


17

 Double-click a Camera input monitor to open the configuration panel

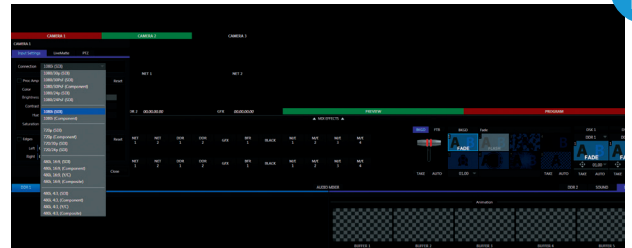


18

 Select the appropriate camera connection type for the input and click close

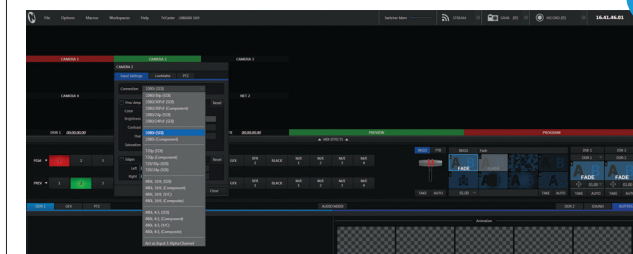

19

 Repeat steps 17-18 for each camera connected

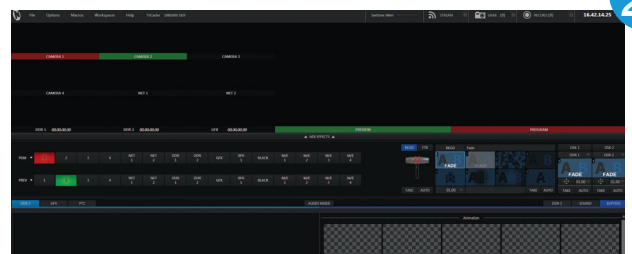

20

 
Choose Program and Preview sources to begin your show

Update TriCaster (Optional)




A

Connect Ethernet cable to the ETHERNET port and plug into an active network connection, as instructed in step 8

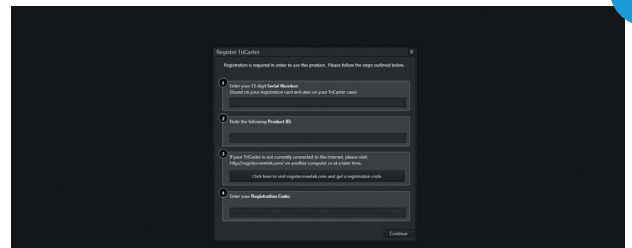


B

 Register TriCaster as instructed in steps 11-14, if needed

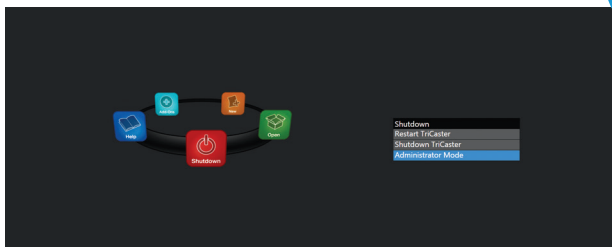

C

 At the Startup Screen, select the Shutdown icon and choose Administrator Mode from the menu

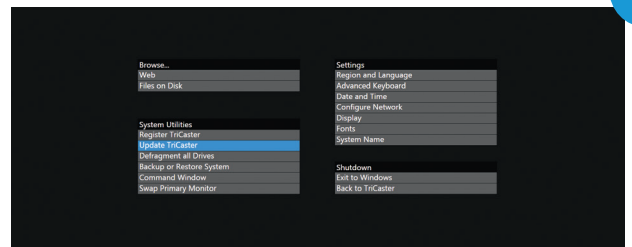

D

In Administrator Mode, select Update TriCaster from the System Utilities menu to download and install software update, if available

 
 
 
 
 
 
NewTek periodically issues free software updates and downloads for TriCaster that provide enhanced performance and new features. Once your system is registered, you may immediately access these downloads by visiting your personal registration page at register.newtek.com.

Refer to the Update TriCaster instructions located above or on the At a Glance page of your Quick Start Guide to optionally check for updates upon initial startup, if desired.

- 1 Connect power cable to the rear panel and plug into an external power source
- 2 Connect cable for User Interface monitor to the vertical DVI port
- 3 Connect cable for Multiview monitor to the vertical HDMI port
- 4 Connect keyboard, mouse, and control surface (optional) to USB ports
- 5 Plug in cameras using the appropriate VIDEO IN connectors
- 6 Plug in audio input and output devices using the appropriate AUDIO IN and AUDIO OUT connectors
- 7 Connect cable for video output to the appropriate VIDEO OUT connector
- 8 Connect Ethernet cable to the ETHERNET port and plug into an active network connection
- 9 Open the right door of the front panel
- 10 Power on TriCaster and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys, if desired)
- 11 Locate the sticker with the Serial Number for your TriCaster
- 12 Complete the required steps in the Register TriCaster dialog box to proceed to the NewTek Registration site
- 13 Create a new User Account if needed, select your product to register, and then enter all required fields (valid e-mail address required)
- 14 Retrieve the Registration Code from the e-mail address used to register and write on the Serial Number sticker for future reference
- 15 At the Startup Screen, choose a session name and resolution, then click Start Session
- 16 From the Session Screen, select the Live icon and click Start Live Production
- 17 Double-click a Camera input monitor to open the configuration panel
- 18 Select the appropriate camera connection type for the input and click close
- 19 Repeat steps 17-18 for each camera connected
- 20 Choose Program and Preview sources to begin your show

Update TriCaster (Optional)

- A. Connect Ethernet cable to the ETHERNET port and plug into an active network connection, as instructed in step 8
- B. Register TriCaster as instructed in steps 11-14, if needed
- C. At the Startup Screen, select the Shutdown icon and choose Administrator Mode from the menu
- D. In Administrator Mode, select Update TriCaster from the System Utilities menu to download and install software update, if available

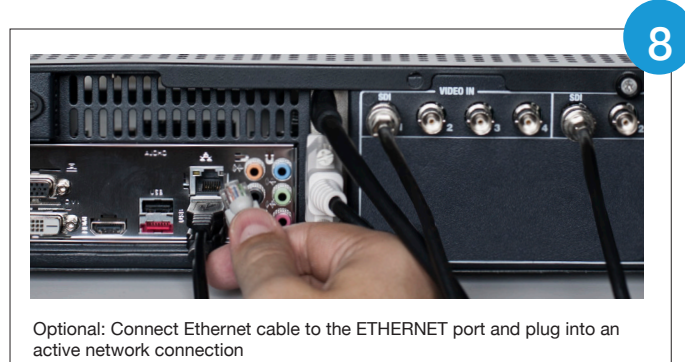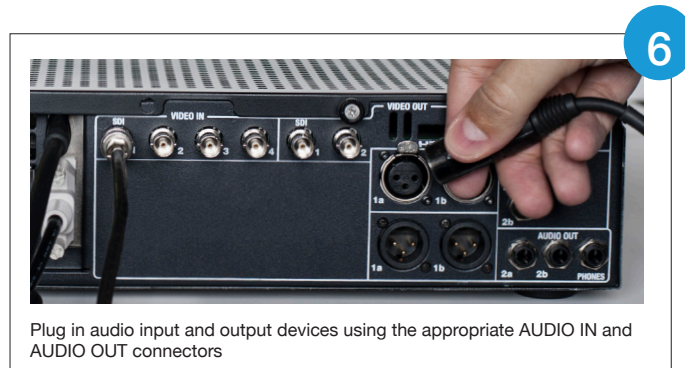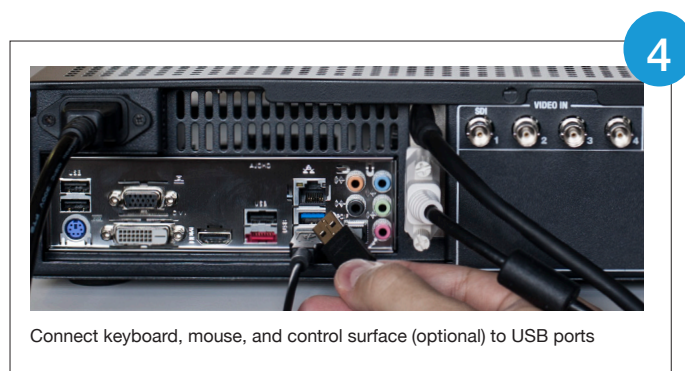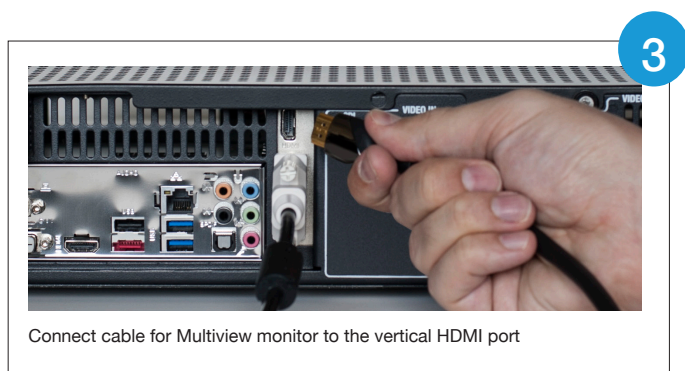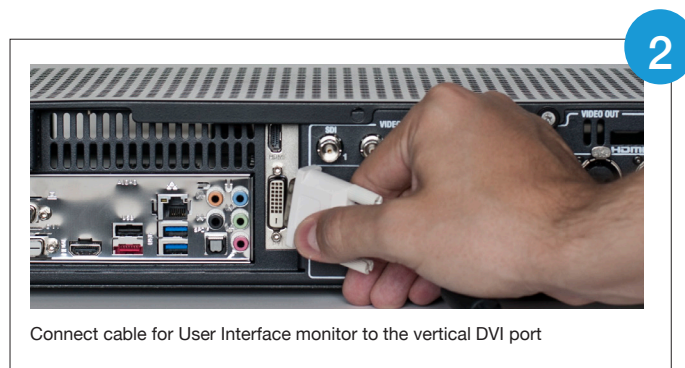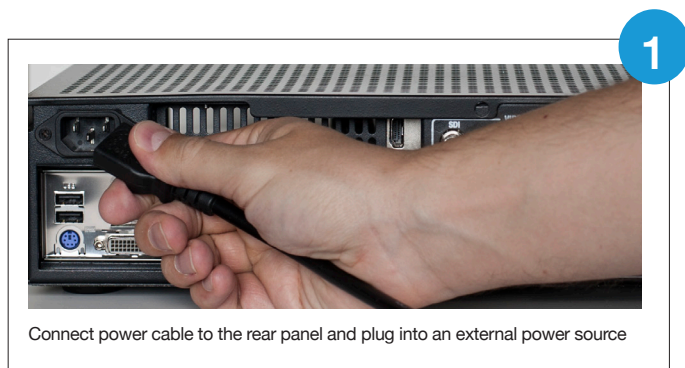

This Quick Start Guide is designed so that you can set up your TriCaster quickly and start using it right away. For comprehensive installation and operation instructions, please review the User Guide, accessible from the HELP menu of your TriCaster system. Supplemental product training videos are also available online at www.newtek.com.

Rack rails are recommended for rack-mount installation of TriCaster 410 and can be purchased from an authorized NewTek reseller. Hardware and screen displays may vary slightly from system shown.

9



Open the right door of the front panel

10



 
Power on TriCaster and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys, if desired)

11




Locate the sticker with the Serial Number for your TriCaster

12

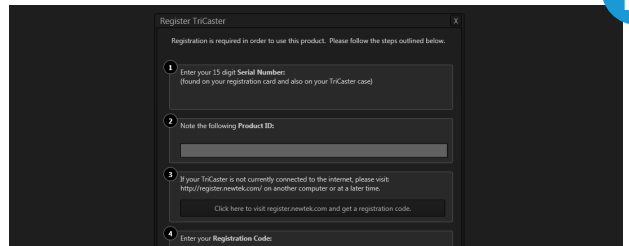

Complete the required steps in the Register TriCaster dialog box to proceed to the NewTek Registration site

 13

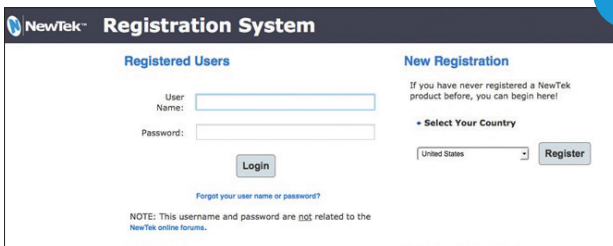

Create a new User Account if needed, select your product to register, and then enter all required fields (valid e-mail address required)

14



Retrieve the Registration Code from the e-mail address used to register and write on the Serial Number sticker for future reference

15

 


At the Startup Screen, choose a session name and resolution, then click Start Session

16




From the Session Screen, select the Live icon and click Start Live Production

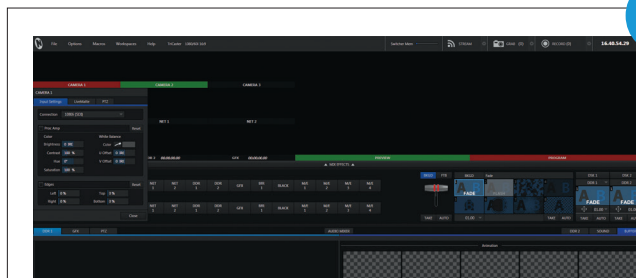


17

 Double-click a Camera input monitor to open the configuration panel

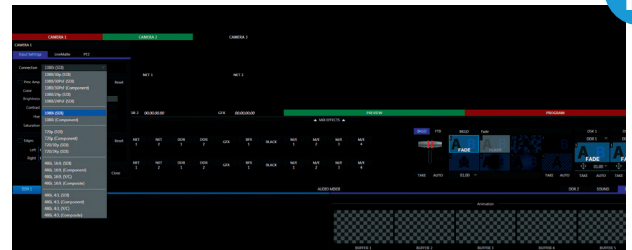


18

 Select the appropriate camera connection type for the input and click close

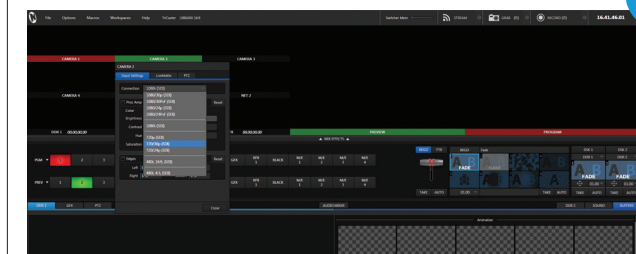

19

 Repeat steps 17-18 for each camera connected

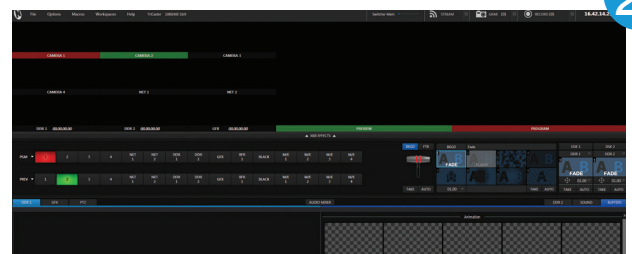

20

 
Choose Program and Preview sources to begin your show

Update TriCaster (Optional)



A

Connect Ethernet cable to the ETHERNET port and plug into an active network connection, as instructed in step 8

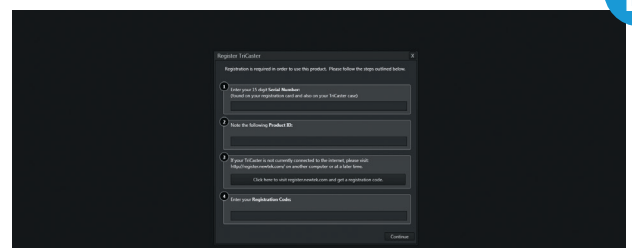


B

Register TriCaster as instructed in steps 11-14, if needed



C

 At the Startup Screen, select the Shutdown icon and choose Administrator Mode from the menu


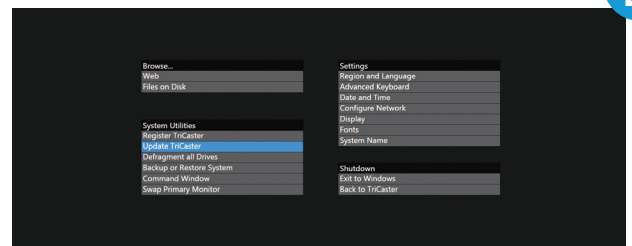


D


In Administrator Mode, select Update TriCaster from the System Utilities menu to download and install software update, if available

CONNECTION

  - 1 Connect the power cable to the rear panel and plug in
- 2 Flip the power switch to ON
- 3 Connect the keyboard to any USB port on the front or rear of the system
- 4 Connect the mouse to any USB port on the front or rear of the system
- 5 Connect cable for User Interface monitor to the DVI port on the rear panel
- 6 Plug in cameras using the appropriate VIDEO IN connectors (BNC connection required – use the included BNC-to-RCA adapters as needed)
- 7 Connect cables for video output to the appropriate VIDEO OUT connectors (BNC connection required – use the included BNC-to-RCA adapters as needed)
- 8 Plug in audio sources using the appropriate AUDIO IN connectors
- 9 Plug in cables for audio output to the appropriate AUDIO OUT connectors
- 10 Power on TriCaster 40 and accept the End User License Agreement

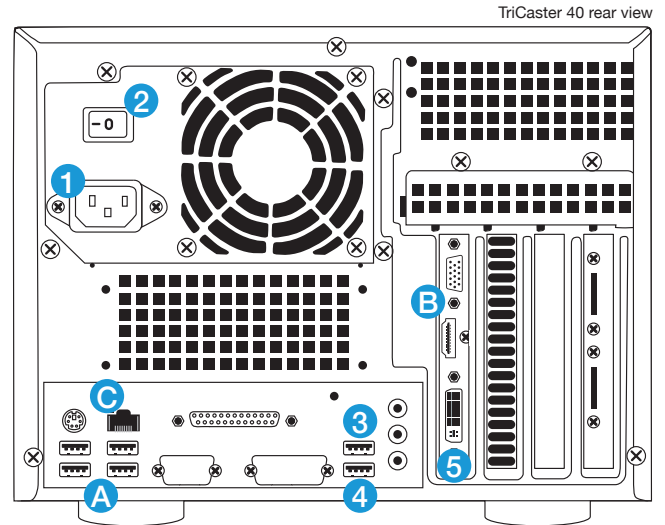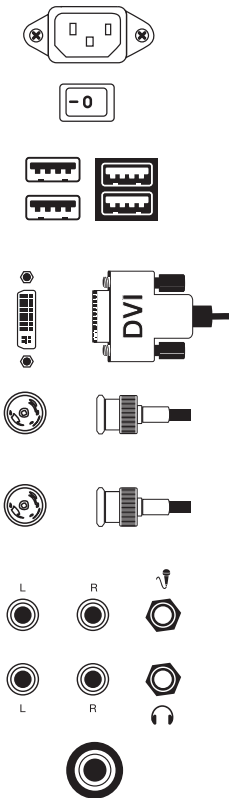


TriCaster 40 rear view

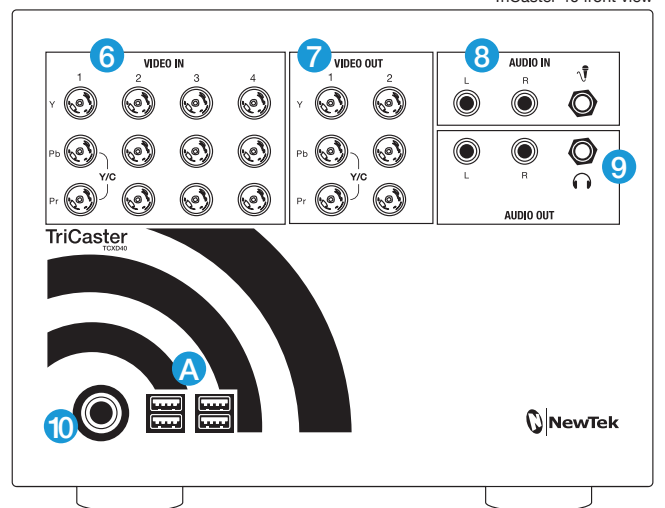 

TriCaster 40 front view




OPTIONAL

 - A Connect TriCaster 40 control surface to a USB port on the front or rear of the system using the included USB cable
- B Connect cable for Multiview monitor to the HDMI or VGA port on the rear panel
- C Connect Ethernet cable to the network port and plug in to an active connection. (This step will make system registration possible directly from the TriCaster.)

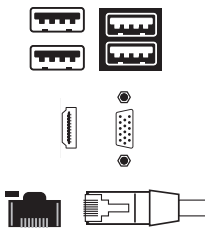


REGISTRATION

   
Registration is required to begin using your TriCaster. If you have connected your system to the Web, the NewTek Registration site will load automatically upon submitting your serial number. You may also register from any Web browser at register.newtek.com.

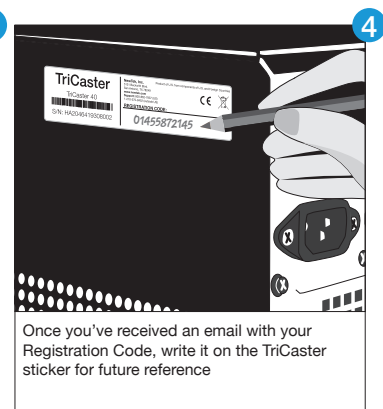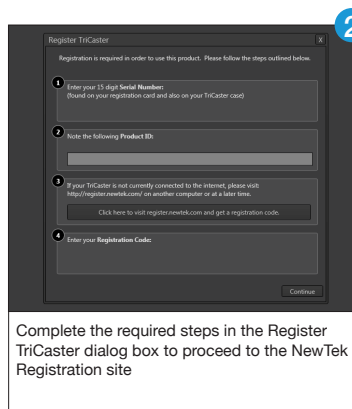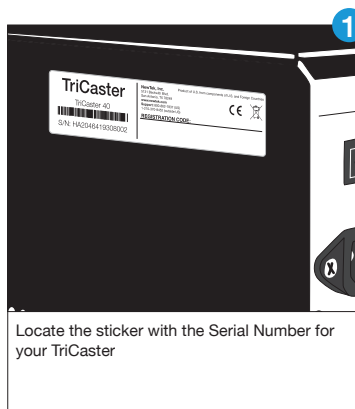


— LIVE PRODUCTION —

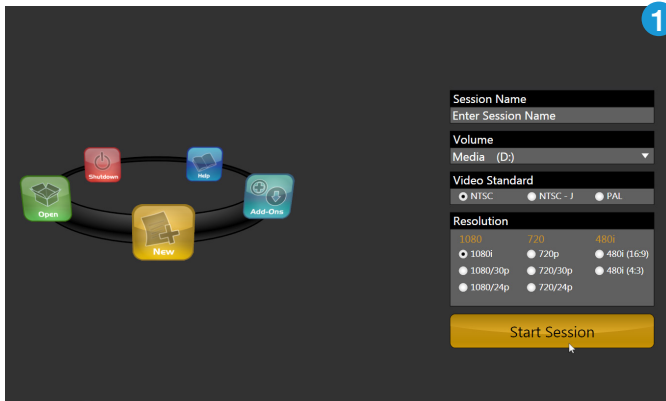 

 
Choose a session name and resolution, then click Start Session

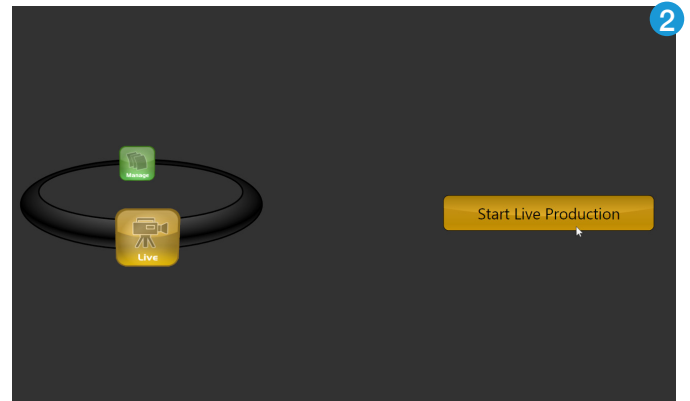

 
Select the Live icon and click Start Live Production

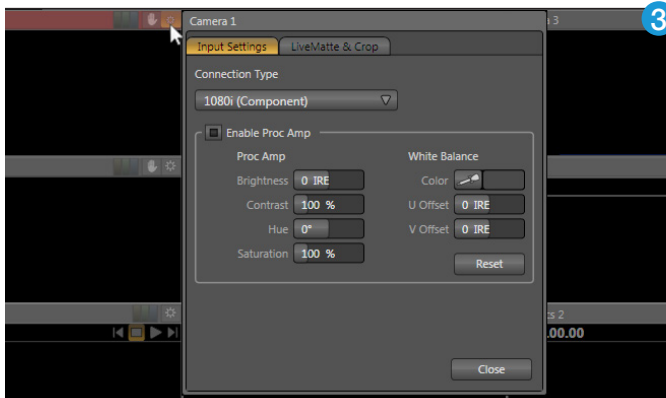

 Mouse over a Camera input monitor and click the gear icon

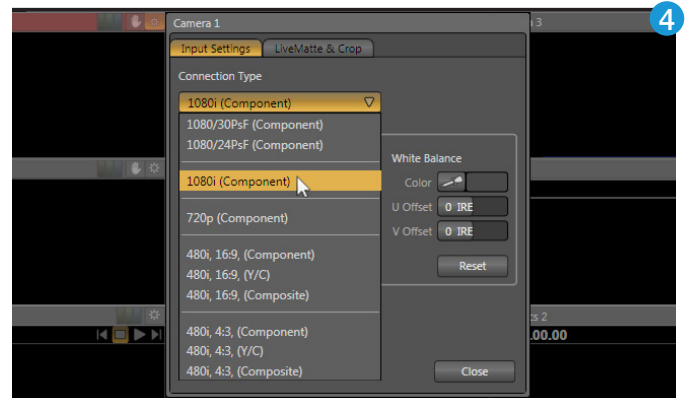

 Select the appropriate camera connection type for the input and click close (repeat steps 3-4 for each camera connected)

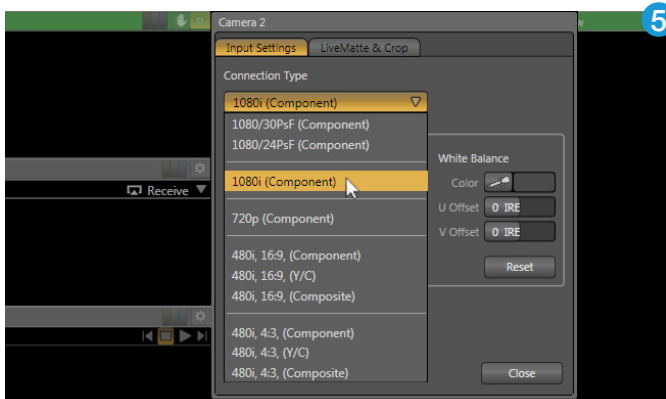

Repeat steps 3-4 for each camera connected



Choose Program and Preview sources to begin your show

 
TriCaster® Mini

HD-4i

Quick Start Guide

Setup

1

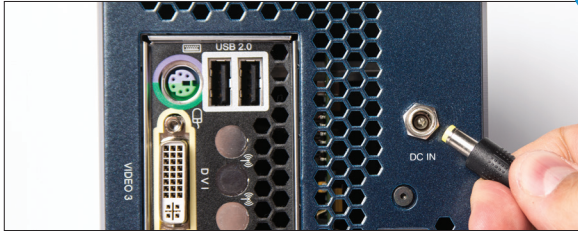


Connect the TriCaster power supply cable to the DC IN port on the rear panel and plug into an electrical outlet or external power source

2



Connect the keyboard and mouse using USB ports

 3

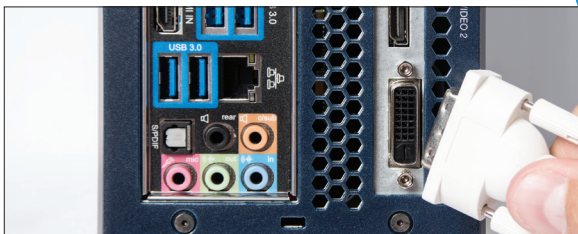

Connect the cable for User Interface monitor to the DVI port on the right

4



 
Optional: Connect the cable for Multiview monitor to the HDMI port on the right

5



Plug an Ethernet cable into the TriCaster Ethernet port and connect to an active local network

6

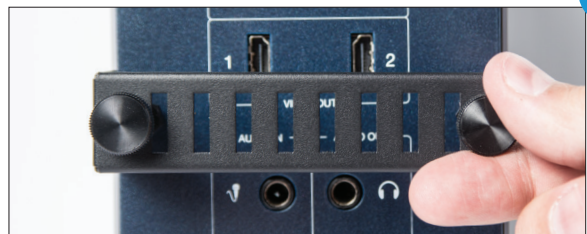

Optional: Mount and fasten the included bracket between the VIDEO and AUDIO ports on the front panel for additional cable security

7



Connect an appropriate HDMI accessory cable to camcorder and plug in using VIDEO IN port 1; repeat using ports 2-4 for additional camcorders

8



Connect the cable for HDMI output display to VIDEO OUT port 1; repeat using port 2 for additional HDMI output display, as needed

9



Optional: Plug in audio input devices (microphone, audio mixer, or other sound source) using the appropriate 1/4" AUDIO IN jacks

10



Optional: Plug in audio output devices (headphones, speakers, or sound system) using the appropriate 1/4" AUDIO OUT jacks

 
TriCaster® Mini Quick Start Guide

HD-4i


Registration - Required




Press the power button and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys if desired)

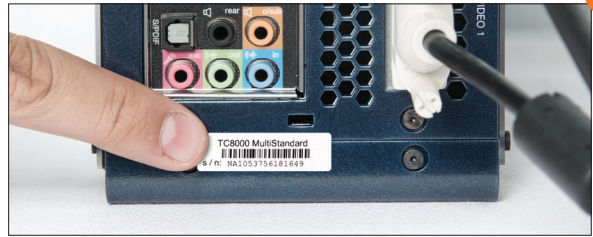

 
Locate the sticker with the 15-digit Serial Number (s/n) for your TriCaster and write down for future reference

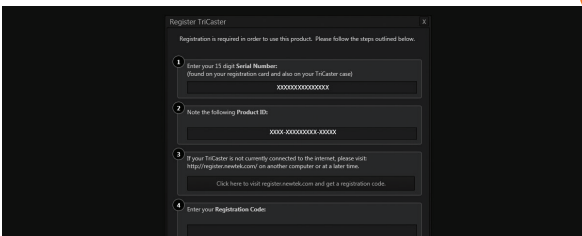

 
Enter your Serial Number as directed in the Register TriCaster dialog box and write down the Product ID provided for future reference

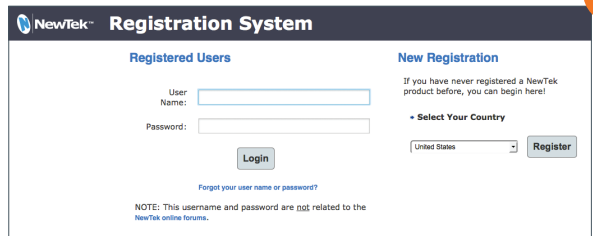

 
Click the button as directed in the Register TriCaster dialog box to proceed to the NewTek Registration site

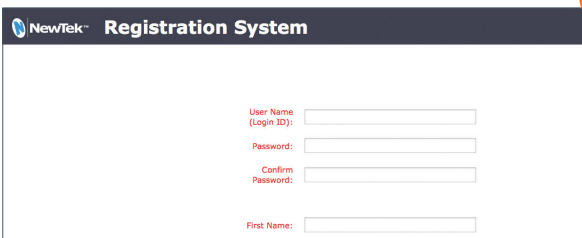

 Create (or log into) your User Account in the NewTek Registration System using a valid e-mail address

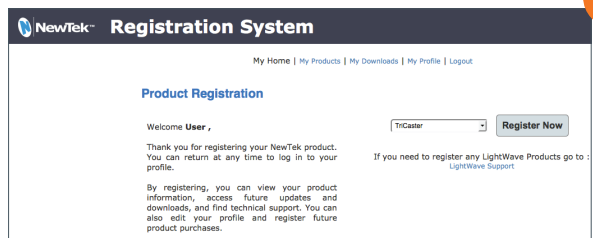

 
Select TriCaster Mini from the drop-down menu and click the Register Now button

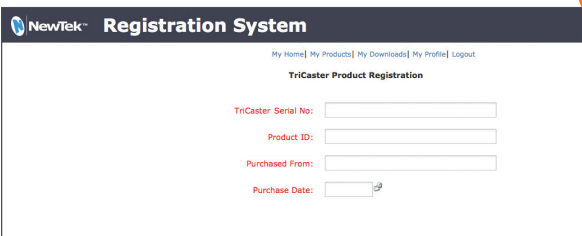

Enter your Serial Number (if needed), Product ID and additional information as required, then click the Register button



 When you receive the email with your Registration Code, write it on the TriCaster sticker for future reference

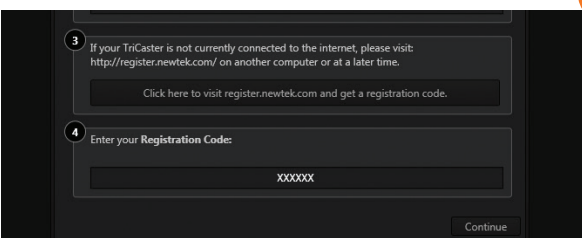

Enter your Registration Code in the Register TriCaster dialog box as directed, then click Continue to complete registration

 
 
 
 
 
 
Registration is required to begin using your TriCaster. If you have connected your TriCaster to the Web, the NewTek Registration site will load automatically upon submitting your Serial Number. You may also register from any Web browser at register.newtek.com (Serial Number and Product ID required).

Be sure to record your User Account login and password, Serial Number, Product ID, and Registration Code, and store in a safe place for future reference when accessing software updates and downloads, contacting NewTek Customer Support, or performing a system restore.

TriCaster® Mini Quick Start Guide

HD-4i

Getting Started

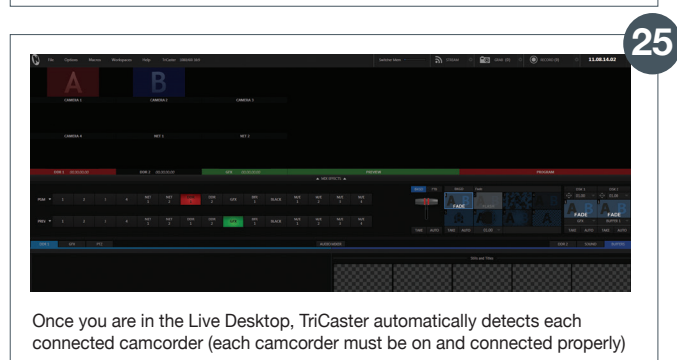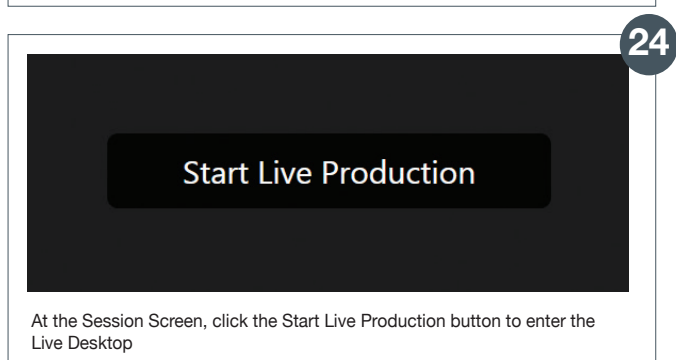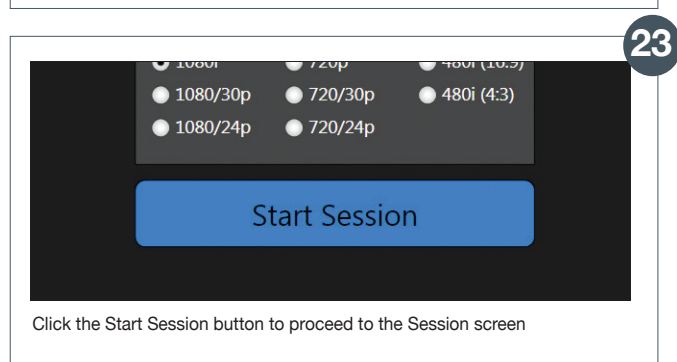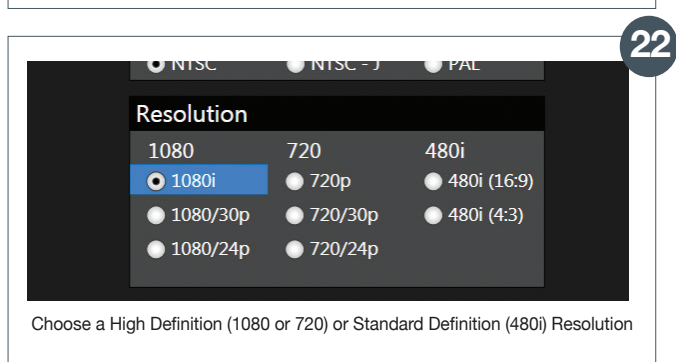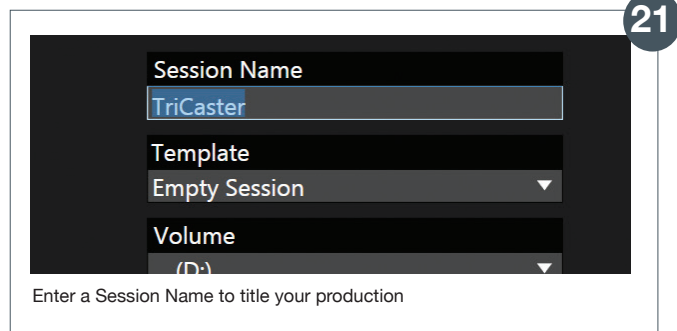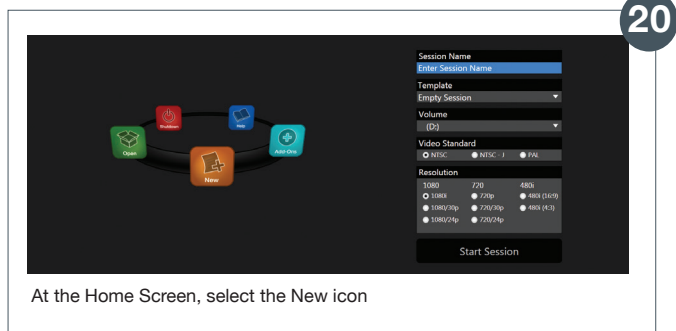


Case display not available on all TriCaster Mini models. NewTek periodically issues free software updates and downloads for TriCaster that provide enhanced performance and new features. Once your system is registered, you may immediately access these downloads by visiting your personal registration page at register.newtek.com

TriCaster® Mini Quick Start Guide

HD-4i


Basic Multi-Camera Switching

A

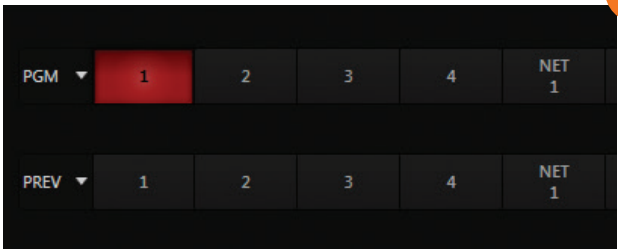


Click on the 1 button in the Program row (PGM) to output the video from Camera 1 (the video on Program is what your audience sees)

B

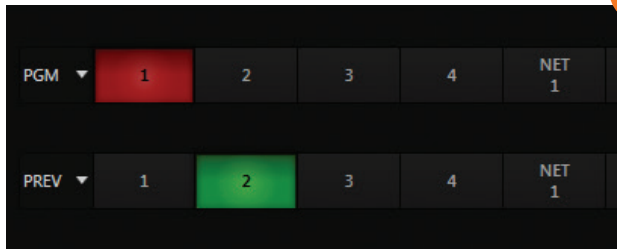


Click on the 2 button in the Preview row (PVW) to preview the video from Camera 2 (the video on Preview is what your audience will see next)

C




Locate the TAKE button beneath the T-Bar to the right of the switcher

D




To switch between Camera 1 and Camera 2 by performing a cut, click the TAKE button

E




Locate the AUTO button beneath the T-Bar to the right of the switcher

F




To switch between Camera 2 and Camera 1 by performing a Fade transition, click the AUTO button

G



To perform a Fade transition manually using the T-BAR, click on the handle and hold the mouse button

H



Drag the T-BAR handle all the way down to switch between Camera 1 and Camera 2, then release the mouse button to complete the transition

TriCaster® Mini

HD-4sdi

At a Glance

- 1 Connect the TriCaster power supply cable to the DC IN port on the rear panel and plug into an electrical outlet or external power source
- 2 Connect the keyboard and mouse using USB ports
- 3 Connect the cable for User Interface monitor to the DVI port on the right
- 4 Optional: Connect the cable for Multiview monitor to the HDMI port on the right
- 5 Plug an Ethernet cable into the TriCaster Ethernet port and connect to an active local network
- 6 Connect an appropriate SDI accessory cable to camera and plug in using VIDEO IN port 1; repeat using ports 2-4 for additional cameras
- 7 Connect the cable for SDI output to VIDEO OUT port 1; repeat using port 2 for additional SDI output, as needed
- 8 Plug in audio input devices (microphone, audio mixer, or other sound source) using the appropriate 1/4" AUDIO IN jacks
- 9 Optional: Plug in audio output devices (headphones, speakers, or sound system) using the appropriate 1/4" AUDIO OUT jacks
- 10 Press the power button and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys if desired)
- 11 Locate the sticker with the 15-digit Serial Number (s/n) for your TriCaster and write it down on the included registration card for future reference
- 12 Enter your Serial Number as directed in the Register TriCaster dialog box and write down the Product ID provided for future reference on the included registration card
- 13 Click the button as directed in the Register TriCaster dialog box to proceed to the NewTek Registration site
- 14 Create (or log into) your User Account in the NewTek Registration System using a valid e-mail address
- 15 Select TriCaster Mini from the drop-down menu and click the Register Now button
- 16 Enter your Serial Number (if needed), Product ID and additional information as required, then click the Register button
- 17 When you receive the email with your Registration Code, write it on the TriCaster sticker and your registration card for future reference
- 18 Enter your Registration Code in the Register TriCaster dialog box as directed, then click Continue to complete registration
- 19 At the Home Screen, select the New icon
- 20 Enter a Session Name to title your production
- 21 Choose a High Definition (1080 or 720) or Standard Definition (480i) Resolution
- 22 Click the Start Session button to proceed to the Session screen
- 23 At the Session Screen, click the Start Live Production button to enter the Live Desktop
- 24 Once you are in the Live Desktop, TriCaster automatically detects each connected camera (each camera must be on and connected properly)

Update TriCaster (Optional)

- A. Connect Ethernet cable to the ETHERNET port and plug into an active network connection, as instructed in step 5
- B. Register TriCaster as instructed in steps 11-18, if needed
- C. At the Startup Screen, select the Shutdown icon and choose Administrator Mode from the menu
- D. In Administrator Mode, select Update TriCaster from the System Utilities menu to download and install software update, if available

 
TriCaster® Mini

HD-4sdi

Quick Start Guide

Setup

1

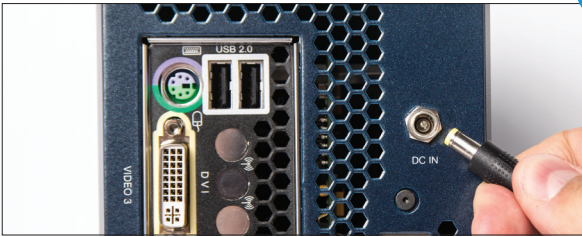


Connect the TriCaster power supply cable to the DC IN port on the rear panel and plug into an electrical outlet or external power source

2




Connect the keyboard and mouse using USB ports

 3

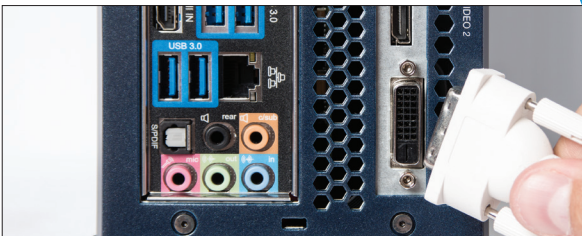

Connect the cable for User Interface monitor to the DVI port on the right

 4

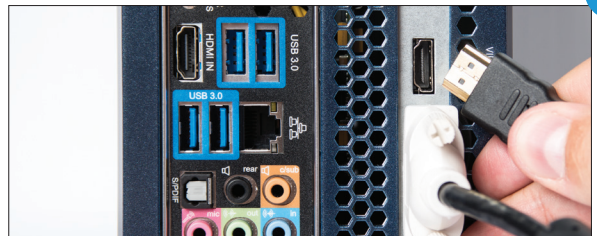

Optional: Connect the cable for Multiview monitor to the HDMI port on the right

5



Plug an Ethernet cable into the TriCaster Ethernet port and connect to an active local network

6



Connect an appropriate SDI accessory cable to camera and plug in using VIDEO IN port 1; repeat using ports 2-4 for additional cameras

7



Connect the cable for SDI output to VIDEO OUT port 1; repeat using port 2 for additional SDI output, as needed

8



Optional: Plug in audio input devices (microphone, audio mixer, or other sound source) using the appropriate 1/4" AUDIO IN jacks

9



Optional: Plug in audio output devices (headphones, speakers, or sound system) using the appropriate 1/4" AUDIO OUT jacks

10

 


Press the power button and accept the End User License Agreement (press the keyboard button for ILLUMINATION to light keys if desired)


TriCaster® Mini Quick Start Guide

HD-4sdi


Registration - Required

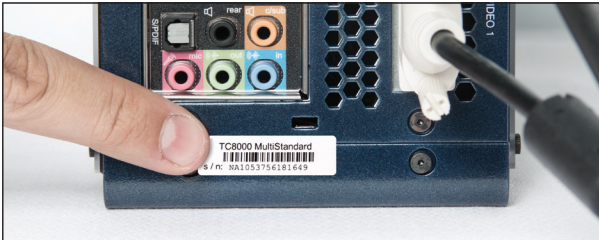

 Locate the sticker with the 15-digit Serial Number (s/n) for your TriCaster and write it down on the included registration card for future reference

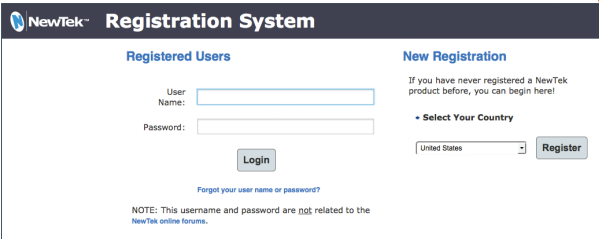

 
Click the button as directed in the Register TriCaster dialog box to proceed to the NewTek Registration site

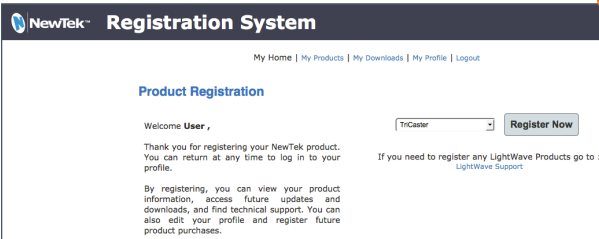


Select TriCaster Mini from the drop-down menu and click the Register Now button



 
When you receive the email with your Registration Code, write it on the TriCaster sticker and your registration card for future reference

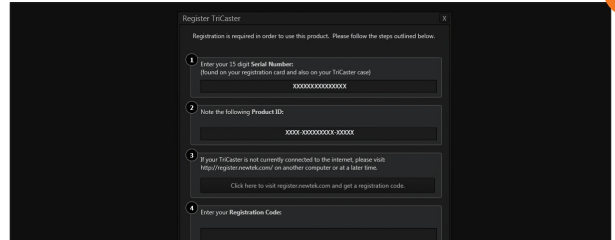

 
Enter your Serial Number as directed in the Register TriCaster dialog box and write down the Product ID provided for future reference on the included registration card

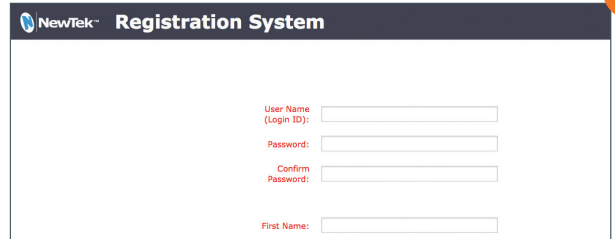

 Create (or log into) your User Account in the NewTek Registration System using a valid e-mail address

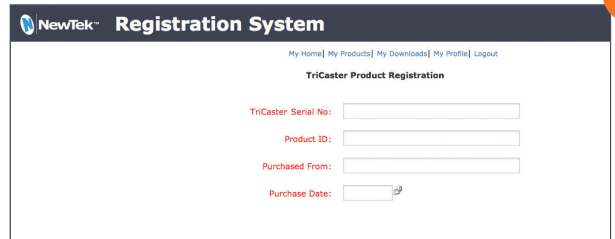

 Enter your Serial Number (if needed), Product ID and additional information as required, then click the Register button

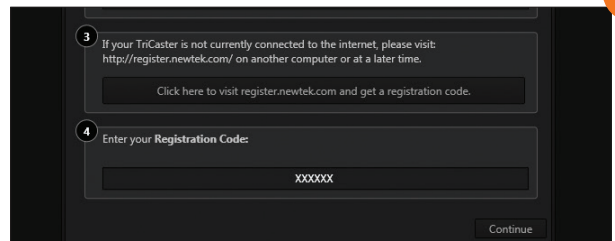

Enter your Registration Code in the Register TriCaster dialog box as directed, then click Continue to complete registration

 
 
 
 
 
 
Registration is required to begin using your TriCaster. If you have connected your TriCaster to the Web, the NewTek Registration site will load automatically upon submitting your Serial Number. You may also register from any Web browser at register.newtek.com (Serial Number and Product ID required).

Be sure to record your User Account login and password, Serial Number, Product ID, and Registration Code, and store in a safe place for future reference when accessing software updates and downloads, contacting NewTek Customer Support, or performing a system restore.

TriCaster® Mini Quick Start Guide

HD-4sdi

Getting Started

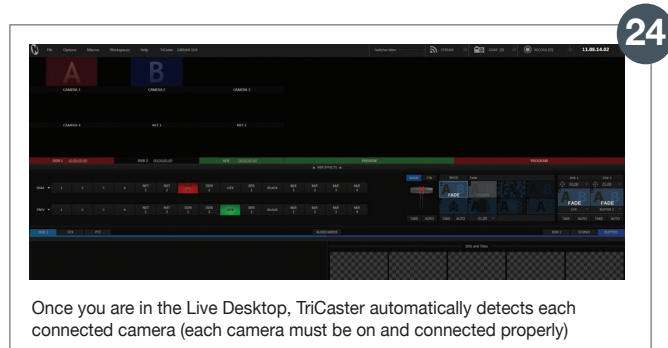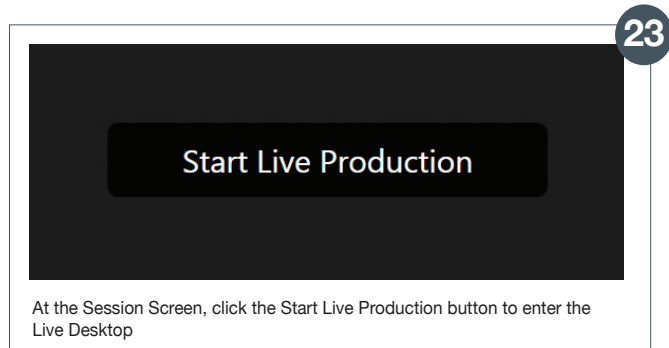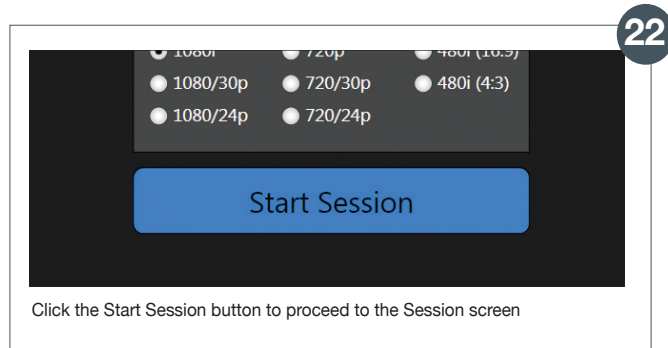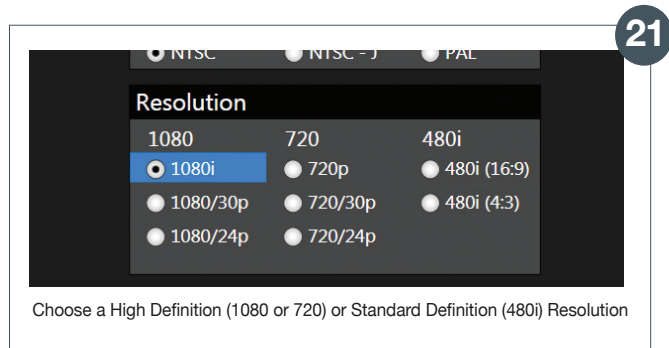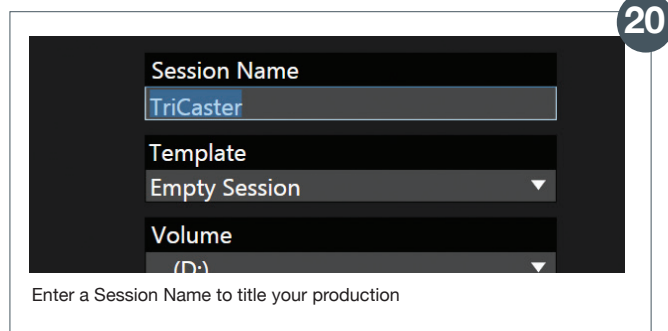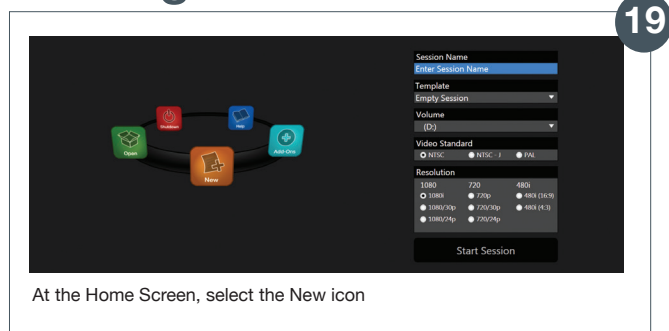

Case display not available on all TriCaster Mini models. NewTek periodically issues free software updates and downloads for TriCaster that provide enhanced performance and new features. Once your system is registered, you may immediately access these downloads by visiting your personal registration page at register.newtek.com



© 2016 NewTek, Inc. All rights reserved.

TriCaster, 3Play, TalkShow and LightWave 3D are registered trademarks of NewTek, Inc.

NDI, MediaDS, LightWave, ProTek, and Broadcast Minds are trademarks and/or service marks of NewTek, Inc.